



Sony Ericsson W810i Charger Adapter Replacement

Replacing W810i Charger Adapter

Written By: Ben Micucci



INTRODUCTION

This guide will show the user how to replace the charger adapter for the W810i

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [T7 Torx Screwdriver](#) (1)
-

Step 1 — Charger Adapter



- Power the phone off.
- Press down firmly against the icon on the lower rear panel with your thumb.
- Slide the panel down to remove it.

Step 2

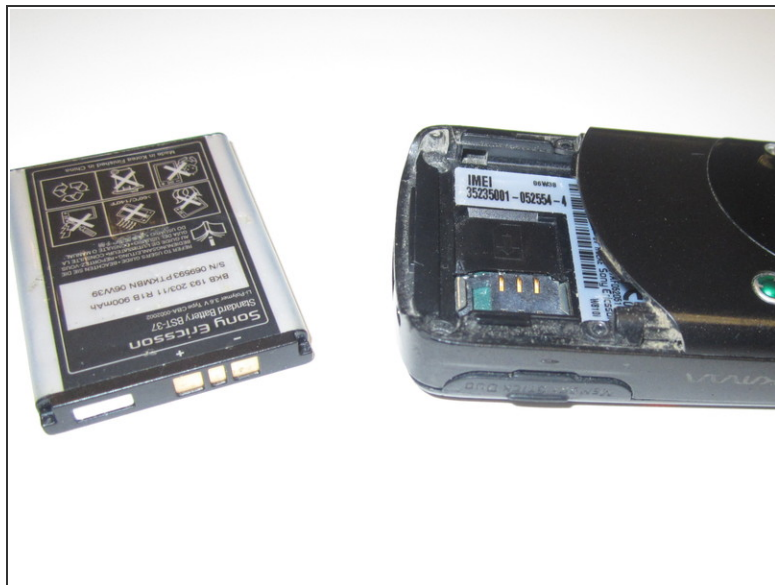

- Lift the battery and pull it out.
- Remove the SIM card too if you have one.

Step 3



- Remove the following screws:

- Two T7 Torx screws

- Two Phillips #00 screws

Step 4



- Use an opening tool to remove the camera faceplate.


⚠ Be careful to not bend the camera faceplate when removing it.

Step 5




- Flip the phone over and use an opening tool to pry off the number pad.
- Separate the keypad from the motherboard.

Step 6

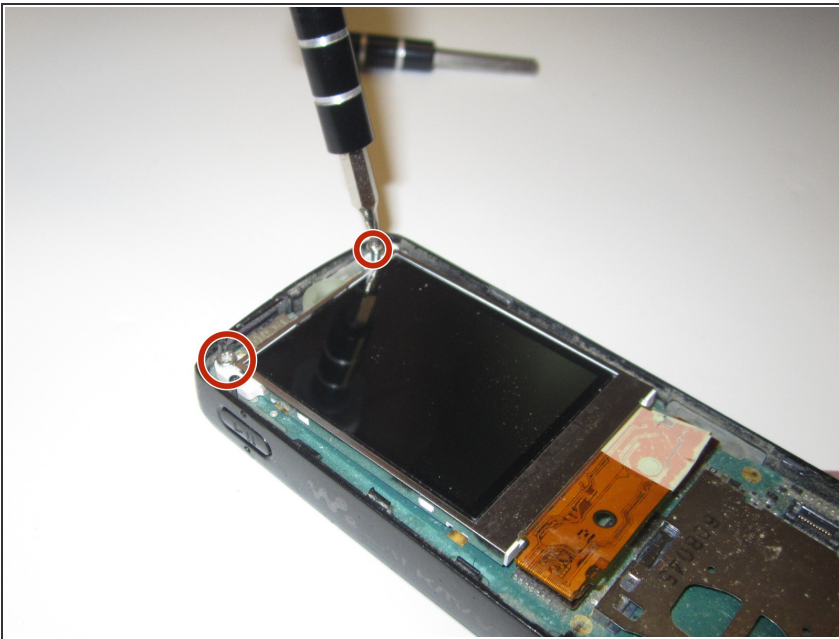

- Remove two T6 Torx screws that secure the motherboard.
 - Use an opening tool to remove the motherboard. Pay attention to cables on the motherboard.
- ⚠ Do not pry too hard on the motherboard, as it can break under too much force.

Step 7

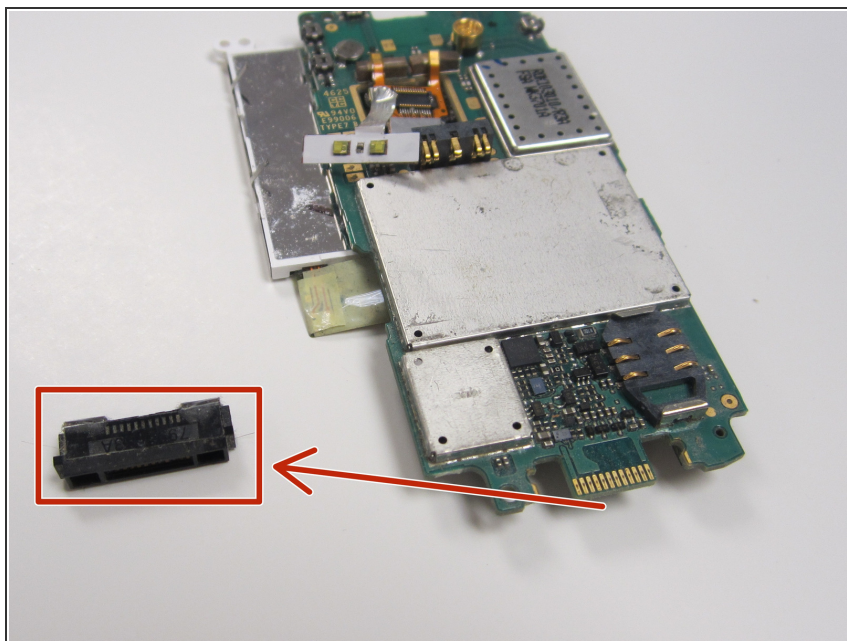

- Pull off charger adapter and remove it.

⚠ Pull evenly on the full width of the cable so that no individual wires are overly strained.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-21 08:25:49 AM.